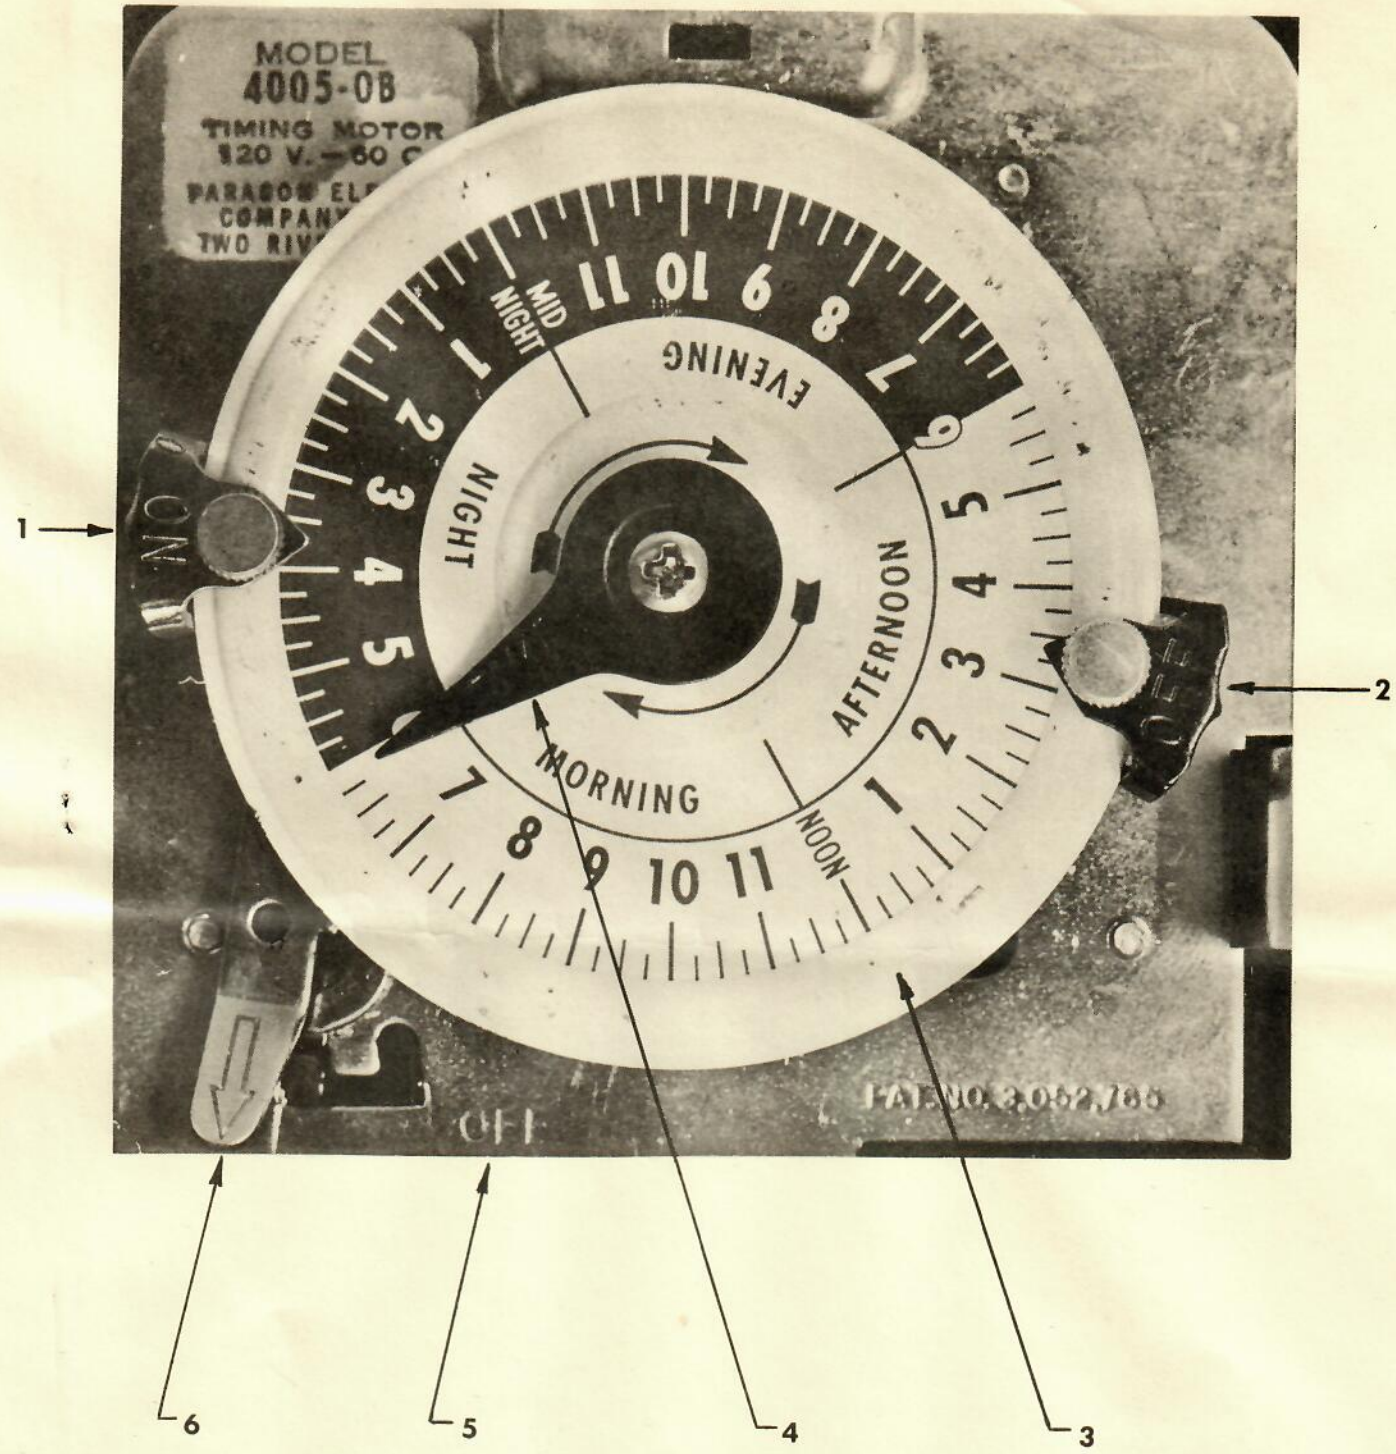

1 - "ON" TRIPPER (BRIGHT)

2 - "OFF" TRIPPER (DARK)

3 - TIME CLOCK DIAL

4 - BLACK TIME POINTER

5 - LEVER SWITCH "OFF" POSITION

6 - LEVER SWITCH "ON" POSITION